If necessary, the external surfaces of the speaker microphone may be cleaned with a mild soap solution and warm water.

WAINTENANCE:

Antenna versions only:
The speaker microphone assembly will perform best when worn above the shoulder

plug is not in use.

accessory.

CAUTION: to maintain the environmental seal, replace the protective cover when the

into the earphone jack. Audio will be muted in the speaker microphone and routed to the

- earphone Jack insert the audio accessory with 2.5 mm plug
 - remove the protective cover from the

Earphone Jack


position as required

• set the volume control knob to "Hi" or "Lo"

2-position volume control

Turn the radio on and operate it as explained in the operating instructions supplied with the radio. Remember that the receiver audio will be heard only from the accessory speaker.

OPERATION:

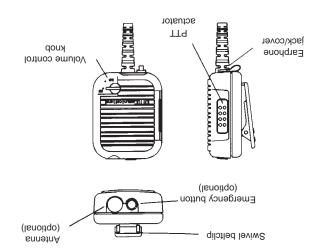


connector on top of the


- 6. Attach antenna to the
- Antenna version only: 5. Remove antenna from 2-way radio
- accessory connector tighten mounting thumbscrew if required
- accessory connector

 3. Attach speaker microphone to the radio
- 2. Remove any dust caps or covers from radio
 - Ito oiber minT . I

:NOITALLATION:

  Information on Disposal of Old Electrical and Electronic Equipment (applicable for EU countries that have adopted separate waste collection systems) $\label{eq:equipment}$





For warranty information, customer service or to order replacement part(s), please contact:



2 East Main Street Carpentersville, IL 60110

Toll Free Phone: 888-234-OTTO (6886)

Phone: 847•428•7171 Fax: 847•428•1956



Remote Speaker Microphone

The OTTO Remote Speaker Microphone for 2-Way Radio Communications includes

- speaker
- microphone
- PTT switch
- 2.5 mm earphone jack
- 2-position volume control
- optional emergency button and appropriate radio connector



OTTO•2 East Main Street•Carpentersville, IL 60110 Phone 847/428/7171 • Fax 847/428/1956 Toll Free 888-234-OTTO